

# FLEX+ Bollard

## Installation Instructions

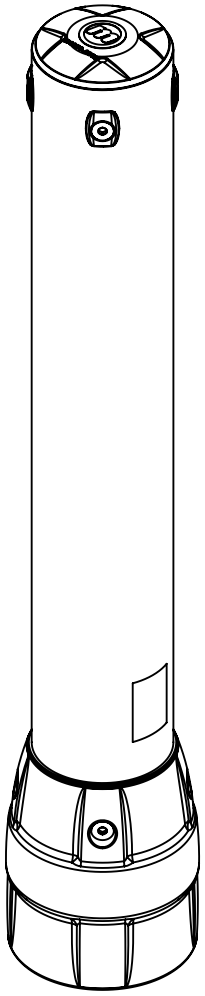


## Components

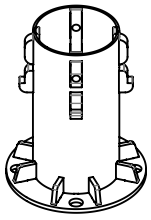


FLX-COR
Base Core




FLX-C-CLR
Collar

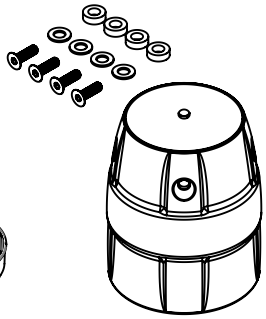


FLX-C-B
PolyCore Base
and Hardware

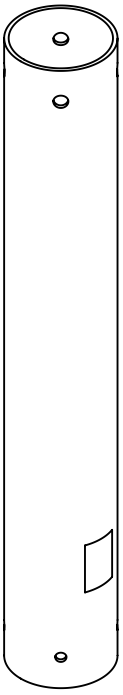

FBL-C-P
Post

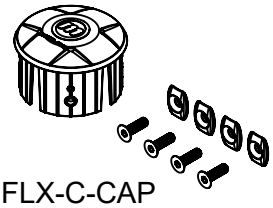


FLX-C-CAP
Cap, Post Washers
and Hardware




HW-C-A12-5 OR
HW-C-M12-130
Concrete Anchors


## Required Tools

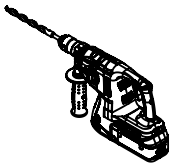


Hammer Drill With
∅12mm [1/2in] Masonry Bit

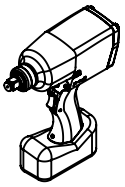


Impact
Driver

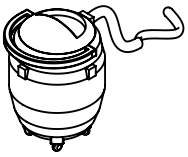

Vacuum



Marker



Extender



Hex Socket
17mm [3/4in]



Hex Bit
8mm [5/16in]


Questions

**McCue Corporation**
Danvers, Massachusetts, USA
+1(800) 800 8503
cservices@mccue.com

**McCue UK**
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com

**McCue Asia**
Xiamen, Fujian, China
+8 592 2200790
rchen@mccue.com


**McCue Europe**
Magirus-Deutz-Straße 14
89077 Ulm, Germany
+49 731 40 38 82 68
eusales@mccue.com


mccue.com


## Step 1




Marker

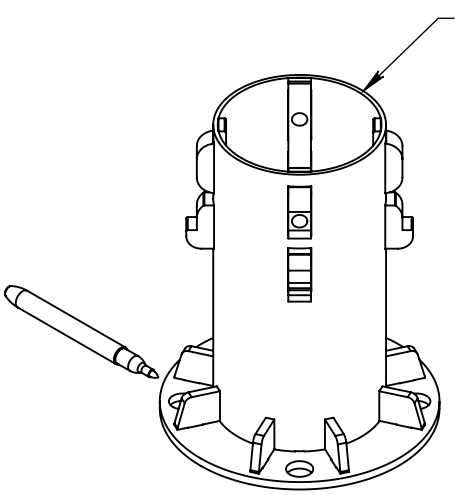


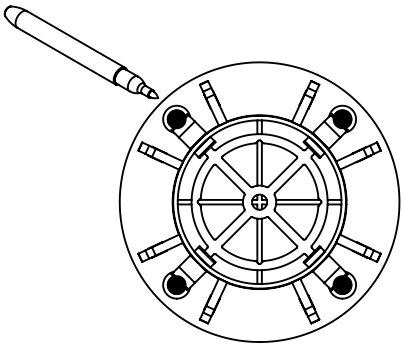


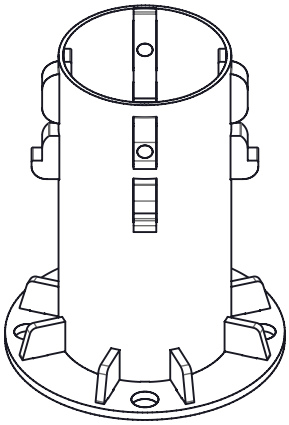

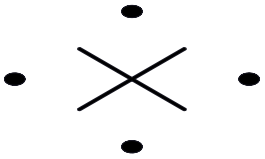
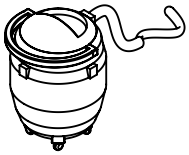


## Step 2

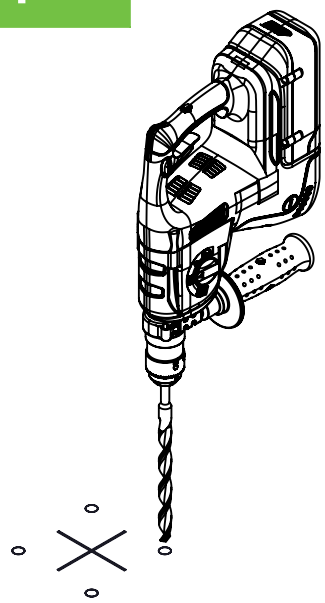

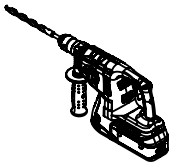


Hammer Drill With
∅12mm or 1/2in Masonry Bit




Vacuum


HW-C-A1250
IMPERIAL
ANCHOR DETAIL

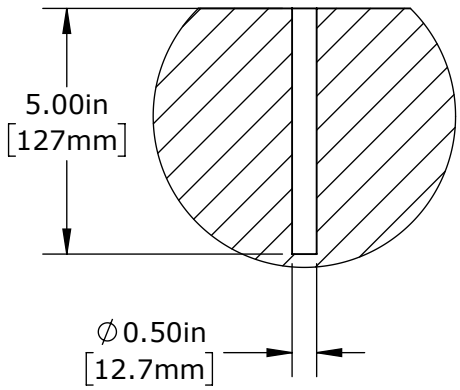



HW-C-AM12-130
METRIC
ANCHOR DETAIL

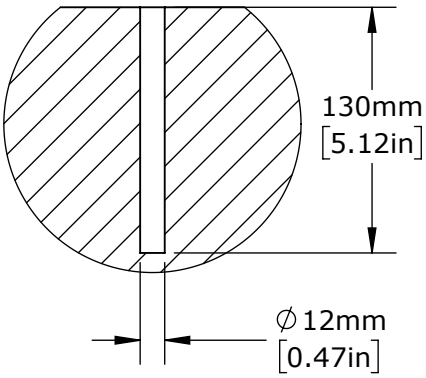

## Step 3

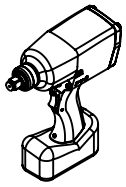


Impact Driver

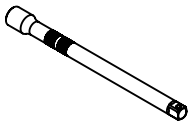


Extender




17mm [3/4in] Hex Socket

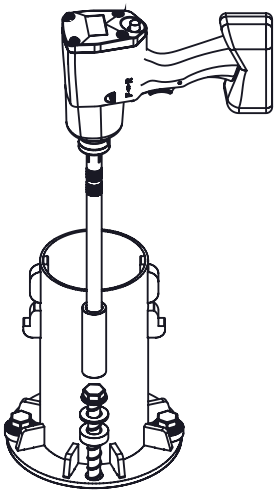


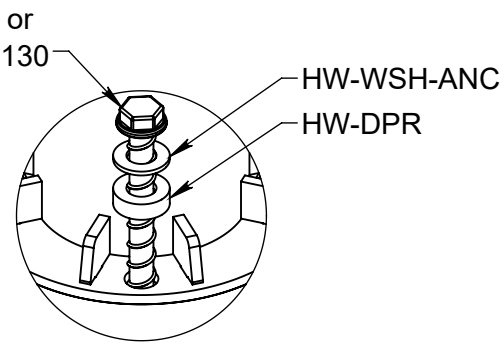



ANCHOR DETAIL


## Step 4



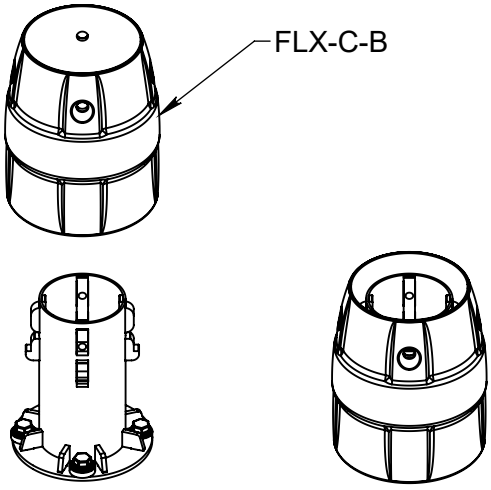



## Step 5



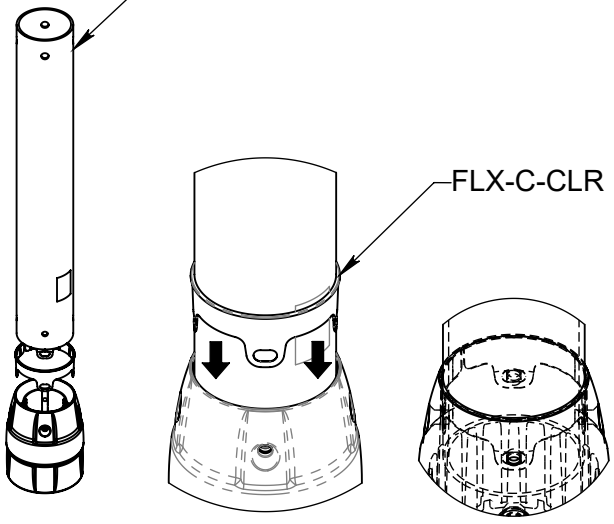


## Step 6

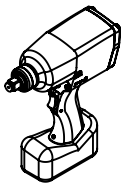


Impact Driver




Hex Bit 8mm [5/16in]

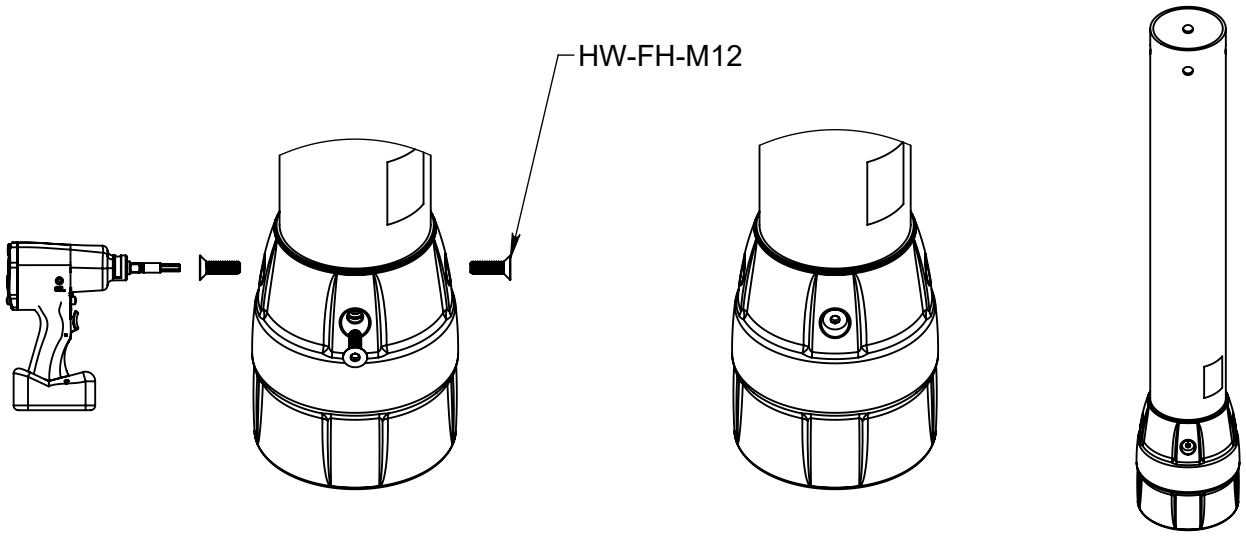


## Step 7

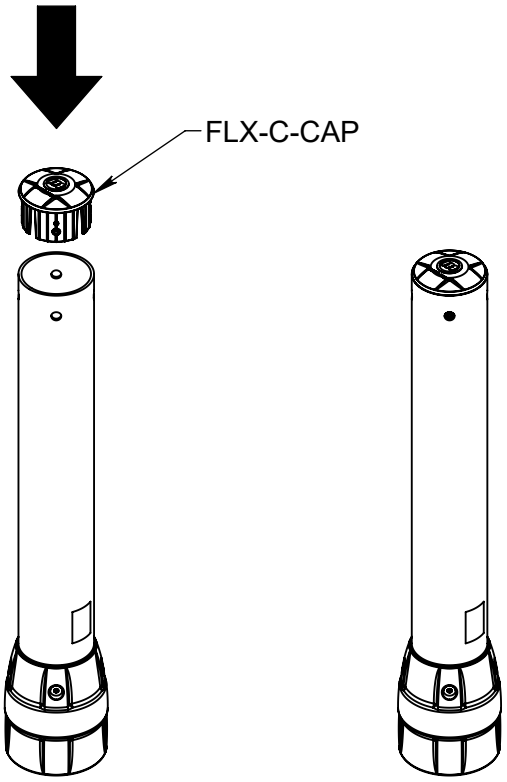


## Step 8

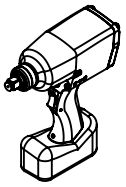

Impact Driver



Hex Bit 8mm [5/16in]

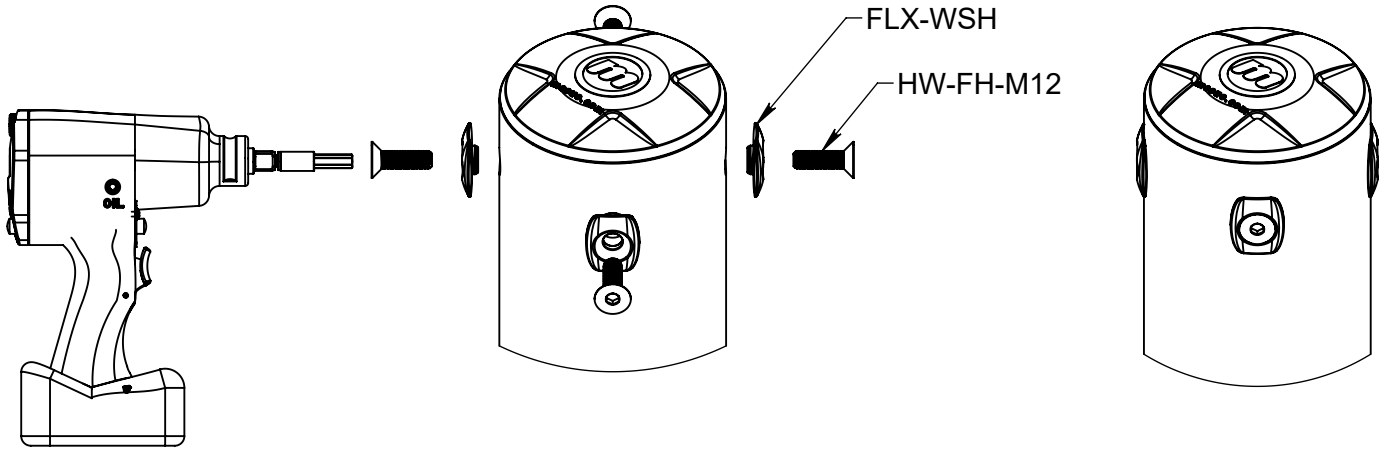


## Installation Complete

